

Performance feature**Operation**

Configuring call forwarding »immediate«

 * 2 1 *  # 

Configuring call forwarding »on no answer«

 * 6 1 *  # 

Configuring call forwarding »on busy«

 * 6 7 *  # 

Deactivating call forwarding »immediate«

 # 2 1 # 

Deactivating call forwarding »on no answer«

 # 6 1 # 

Deactivating call forwarding »on busy«

 # 6 7 # 




Configuring automatic call-back on busy

  * 3 7 # 

Configuring automatic call-back »on no answer«

  * 3 7 # 

Room surveillance

 R  PIN 2 **Condensed operating instructions for extensions****Automatic access to outside line****Performance feature****Operation**

Internal calls

 R  

External calls

Setting own number for next call

 R # 9 0 ... 9  

Temporary disabling of own number transmission

 * 3 1 #  

Forward call with prior notice

 R  

Calling another party during an ongoing call

 R  

Accepting calls

 R * 0 

Accepting a call from an answering machine

 R # 0 

Barring call waiting during an ongoing call

 R 0 

Accepting call waiting during an ongoing call

 R 2 

Talking with two parties simultaneously

 R  R 3 

Switching between two parties

 R  R 2 ... 

Accepting a further call during an ongoing call

 R 2 

Call transfer (ECT)

 R 2  R 4 

Speed dialing

 R * #  

Vanity-dialing

 R # *  

Do you need other brief operators manuals? The CD-ROM delivered with the system contains an operators manual in PDF format Eumex_401_UK_KB_ddmmjj.PDF. Call up this file and print out the number of copies you need.

Performance feature	Operation
Configuring call forwarding »immediate«	* 2 1 * #
Configuring call forwarding »on no answer«	* 6 1 * #
Configuring call forwarding »on busy«	* 6 7 * #
Deactivating call forwarding »immediate«	# 2 1 #
Deactivating call forwarding »on no answer«	# 6 1 #
Deactivating call forwarding »on busy«	# 6 7 #
Configuring automatic call-back on busy	* 3 7 #
Configuring automatic call-back »on no answer«	* 3 7 #
Room surveillance	R PIN 2

Making calls with prefixes 0

Performance feature	Operation
Internal calls	
External calls	0
Setting own number for next call	# 9 0 ... 9
Temporary disabling of own number transmission	* 3 1 #
Forward call with prior notice	R
Calling another party during an ongoing call	R
Accepting calls	* 0
Accepting a call from an answering machine	# 0
Barring call waiting during an ongoing call	R 0
Accepting call waiting during an ongoing call	R 2
Talking with two parties simultaneously	R 0 R 3
Switching between two parties	R R 2 ...
Accepting a further call during an ongoing call	R 2
Call transfer (ECT)	R 2 R 4
Speed dialing	* #
Vanity-dialing	R # *

Do you need other brief operators manuals? The CD-ROM delivered with the system contains an operators manual in PDF format Eumex_401_UK_KB_ddmmjj.PDF. Call up this file and print out the number of copies you need.